

Congratulations! You now own the finest secure cargo bed storage system on today's market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.

Installation Instructions:

2003 + Ford Expedition

Tools Required:

Short Phillips Screwdriver
 Power impact drill/driver
 1/8" drill bit
 3/8" driver socket

Personnel Required: Two (2) people

Materials Included:

2 - 3" Self Tapping Screws
 2 - Tie down Straps


- 1 Open the TruckVault drawers just far enough to reach in and unscrew the rubber stoppers from the underside of the top. Now completely remove the drawers and set aside.



- 2 Remove the cargo cover from the jack storage compartment. You will need to relocate the jack and accessories. Open the cover cap for the spare tire access. Shove the cover cap under the carpet. The carpet will hold the cover cap out of the way for spare access.



- 3 Carefully slide the TruckVault into the cargo area of your vehicle. The front risers will sit down in the hole where the cargo cover for the jack storage was. The gap in the center will straddle the bracket for the cargo cover.
- 4 Locate the lock down holes in the bottom of the Vault. Carefully check underneath the vehicle to make sure there is nothing below these holes, such as wiring, gas tank, spare tire, etc.
- 5 Pre-drill holes using an 1/8" drill bit. Insert the two 3" self-tapping screws through the holes in the Vault and using a power impact drill/driver and a 3/8" socket tighten down snugly. Make sure the heads of the screws are below the top edge of the bottom of the Vault.

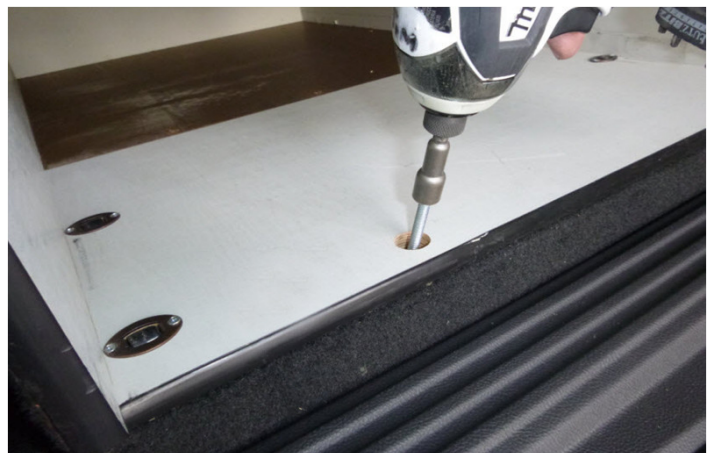

- 6 See Tie-down strap instructions for rear lockdown. Reinstall drawers & rubber drawer stoppers by reversing the procedure in step 1.

Tie-Down Strap Instructions

To ease installation and provide a safe and simple method of securing your Vault to the cargo area of your vehicle, we have provided this tie-down strap. It only takes a moment to install, and provides an extra measure of safety.



1. Loop the end of the strap through a seat latch, or bracket that is secured to the floor of the vehicle.
2. Feed the snap hook through the loop in the end of the strap. Pull snap hook & cam buckle all the way through.



3. Hook the end of the snap hook onto the D-ring on the back of the Vault.
4. Pull snug to tighten the Vault to the floor of the vehicle. Fold seats back into the normal position.



Note: If the seat does not want to catch, you may have to pull the strap away from the middle of the seat latch. You may have to use force to latch the seat which will also tighten the strap.



Note: Specific installation may vary according to your model of Vault and vehicle make, model and year. Use whichever method gives you the easiest installation while providing the most secure and safe attachment. The Vault should be sturdy & the straps tight at the end of installation. Please call us with any questions or concerns.

Congratulations! You now own the finest secure cargo bed storage system on today's market. Enjoy the confidence you'll experience when traveling with your valuables safely locked in your TruckVault.

Installation Instructions:

Ford Expedition Spare Tire Access

Tools Required:

Personnel Required: Two (2) people

Materials Included:

Square Spare Access Rod
10mm Wrench

- 2 Open the passenger drawer and remove the plastic cover cap on the bottom of the drawer.



- 3 Pop the top cover cap out from underneath the top of the TruckVault. Close the drawer and insert the spare access rod through the holes and into the spare tire release. You may have to rotate the tool to line it up with the release. Use the supplied 10mm wrench to lower the spare tire.

